


Size Chart

Rough opening sizes should be 1/2-in to 2-in larger than the unit dimensions listed below.

ACTUAL SIZE	Glass Block Window Width															
	17 1/4	19 1/4	21 1/4	23 1/4	25	27	28 3/4	31	32 3/4	34 3/4	36 3/4	38 3/4	40 1/4	42 1/2	44 1/4	46 1/2
11 1/2	1812	2012	2212	2412	2612	2812	3012	3212	3412	3612	3812	4012	4212	4412	4612	4812
13 1/2	1814	2014	2214	2414	2614	2814	3014	3214	3414	3614	3814	4014	4214	4414	4614	4814
15 1/2	1816	2016	2216	2416	2616	2816	3016	3216	3416	3616	3816	4016	4216	4416	4616	4816
17 1/4	1818	2018	2218	2418	2618	2818	3018	3218	3418	3618	3818	4018	4218	4418	4618	4818
19 1/4	1820	2020	2220	2420	2620	2820	3020	3220	3420	3620	3820	4020	4220	4420	4620	4820
21 1/4	1822	2022	2222	2422	2622	2822	3022	3222	3422	3622	3822	4022	4222	4422	4622	4822
23 1/4	1824	2024	2224	2424	2624	2824	3024	3224	3424	3624	3824	4024	4224	4424	4624	4824
25	1826	2026	2226	2426	2626	2826	3026	3226	3426	3626	3826	4026	4226	4426	4626	4826
27	1828	2028	2228	2428	2628	2828	3028	3228	3428	3628	3828	4028	4228	4428	4628	4828
29	1830	2030	2230	2430	2630	2830	3030	3230	3430	3630	3830	4030	4230	4430	4630	4830
31	1832	2032	2232	2432	2632	2832	3032	3232	3432	3632	3832	4032	4232	4432	4632	4832
32 3/4	1834	2034	2234	2434	2634	2834	3034	3234	3434	3634	3834	4034	4234	4434	4634	4834
34 3/4	1836	2036	2236	2436	2636	2836	3036	3236	3436	3636	3836	4036	4236	4436	4636	4836
36 3/4	1838	2038	2238	2438	2638	2838	3038	3238	3438	3638	3838	4038	4238	4438	4638	4838
38 3/4	1840	2040	2240	2440	2640	2840	3040	3240	3440	3640	3840	4040	4240	4440	4640	4840
40 1/2	1842	2042	2242	2442	2642	2842	3042	3242	3442	3642	3842	4042				
42 1/2	1844	2044	2244	2444	2644	2844	3044	3244	3444	3644	3844	4044				
44 1/2	1846	2046	2246	2446	2646	2846	3046	3246	3446	3646	3846	4046				
46 1/2	1848	2048	2248	2448	2648	2848	3048	3248	3448	3648	3848	4048				

Note: Windows are to be ordered Width x Height

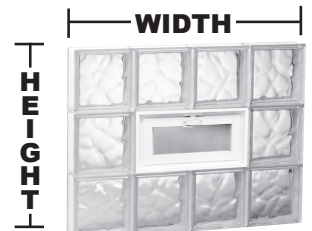

To determine your Home Depot Clearly Secure special order model number...

Step 1) Locate your actual window **width** and **height** using the size chart above
These four numbers will be the first four digits in the window's model #

Step 2) Select a vent option: Vented (**V**) or Non-Vented (**S**) or Dryer-Vented (**DV**)*

*For dryer-vented windows, follow the steps above for a non-vented window and add (**DV**) after your pattern option (i.e. 3224SDCDV)

Step 3) Select a block pattern: Wave (**DC**), Ice (**IC**), Diamond (**DP**), Clear (**CL**), Frosted (**FR**) or Bronze (**BZ**)
Then, add the pattern's abbreviation after the (V) or (S)

Each model number contains 7 digits except for Dryer-Vented windows which contain 9 digits

Model # Example:

31" wide x 23 1/4" high Wave Vented Window = Model #3224VDC

<u>Width/Height</u>	<u>Vent Option</u>	<u>Pattern Option</u>
3224	V	DC